



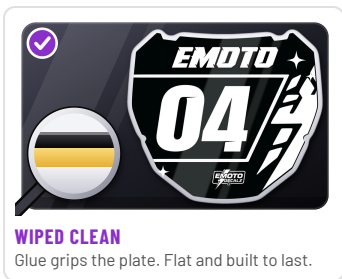

**! READ BEFORE
YOU STICK**

Wipe first. Stick for good.

Your decal is only as strong as the surface under it. Wax, road grime and the oil from your fingers are invisible, but they stop the adhesive from gripping.

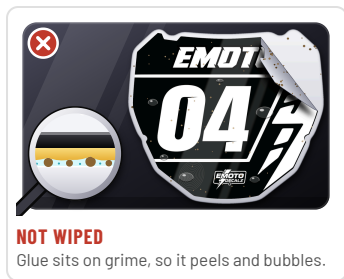

How to apply

- 1 WIPE WITH THE ALCOHOL WIPE**
Use the included wipe on an area a bit bigger than the decal.
- 2 LET IT DRY, HANDS OFF**
Wait about a minute to dry. Don't touch it or wipe it with a rag.
- 3 PEEL, PLACE, PRESS**
Line it up, then squeegee from the centre out to push out the air.
- 4 LEAVE IT TO BOND**
Hold off washing or pressure cleaning for 48 hours while the adhesive cures.

Pro tip: apply in the shade on a mild day. Skip window cleaner, soap or polish before applying, as they leave a film that blocks the glue.